



Enable

URL Barcode Configuration



Disable



Enable

Turn on/off all symbologies



Enable all
1D barcodes



Enable all
2D barcodes

Keyboard Language




French



USA

epos

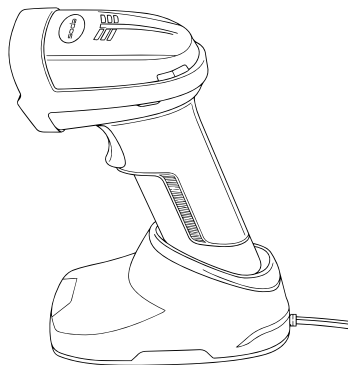

User Manual

2D Wireless
Barcode Scanner

NO. S2DRBEasyManualV0



Version

www.epos.ma

Factory Default




Pairing instruction

Pair instruction


A: Barcode Scanner pair with USB dongle

Step 1, Scan Below Pairing barcode I, barcode II in sequence, and the scanner LED indicator become blue and flashing.

I

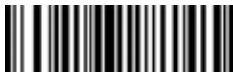

II

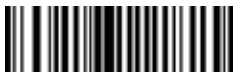

Step 2, Connect the USB dongle to host device and wait a second, the LED indicator blue on barcode scanner after succeed pairing.


B: Barcode scanner pair with bluetooth device

Step 1, Scan Below Pairing barcode I, barcode II in sequence, and the scanner LED indicator become blue and flashing.

I



II

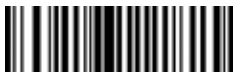

Step 2, Open mobile device bluetooth settings and search for "RB_Scanner_HID" then connect it. When the scanner LED indicator becomes blue, the pairing is complete.

Transmit Speed



No Delay(default)



Delay 10ms



Delay 20ms

End Character



CR(default)



Disable

Buzzer



ON



OFF

Image Reverse



Disable